PARAMAIR

SenseAir

Sensors for Life

Installation manual

tSENSE (Disp) T RH RL

CO_2-, temperature- and relative humidity transmitter

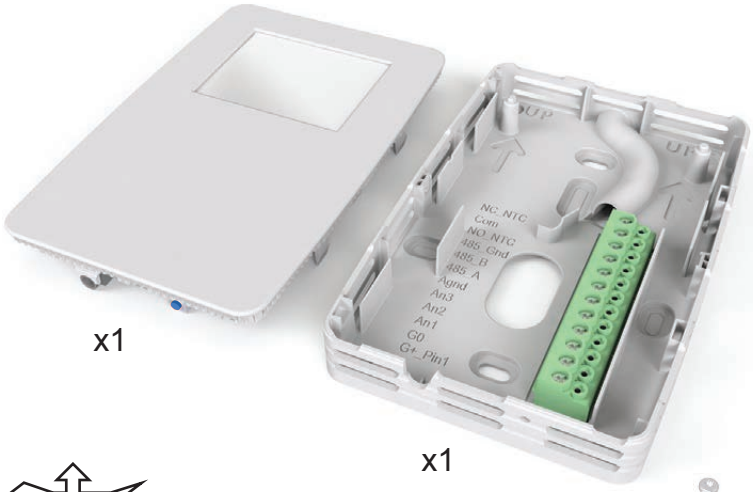

x1

x1

x2

NOTE:
The same ground reference has to be used for the *tSENSE (Disp)* unit and for the control system!

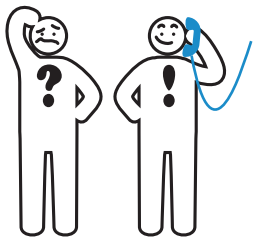

SenseAir
Local representative
+49-40-25305298

IMA286
Edition 6

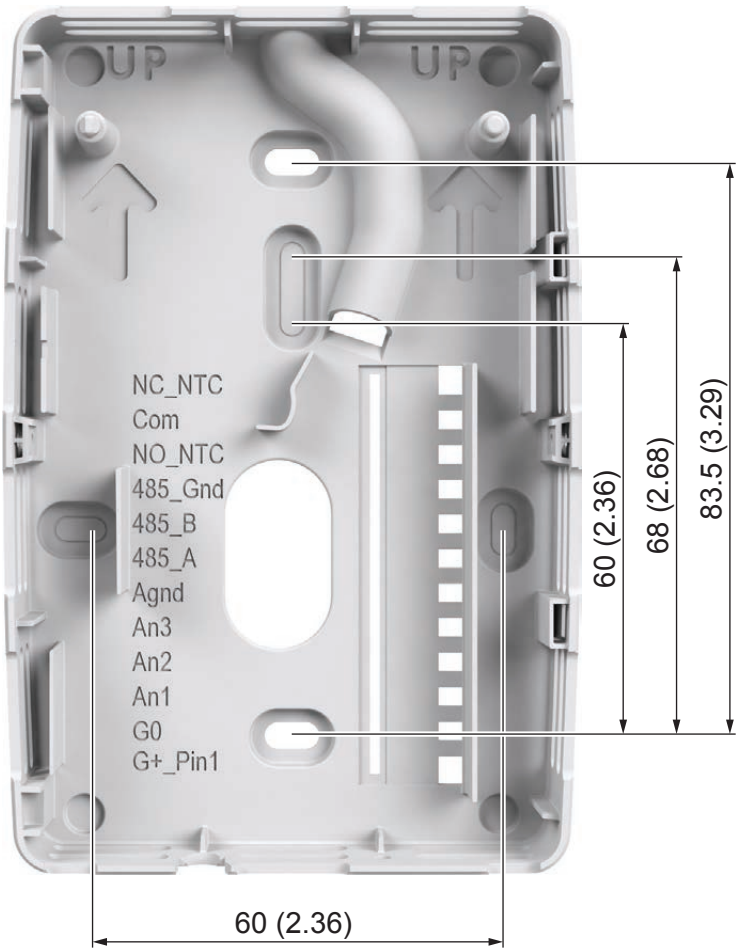

mm
(inches)

1

Alt. 1

Alt. 2

2

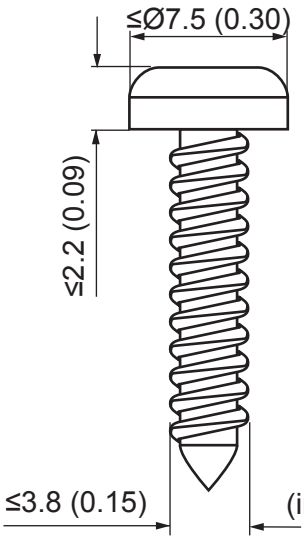

mm
(inches)

3

RL/NC_NTC (Temp)
RL/Com
RL/NO_NTC (Temp)
RS485_Gnd/MB/BAC
RS485_B (-)/MB/BAC
RS485_A (+)/MB/BAC

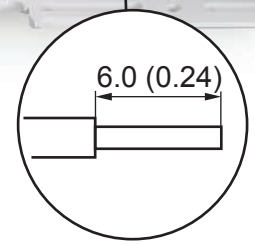

mm
(inches)

4

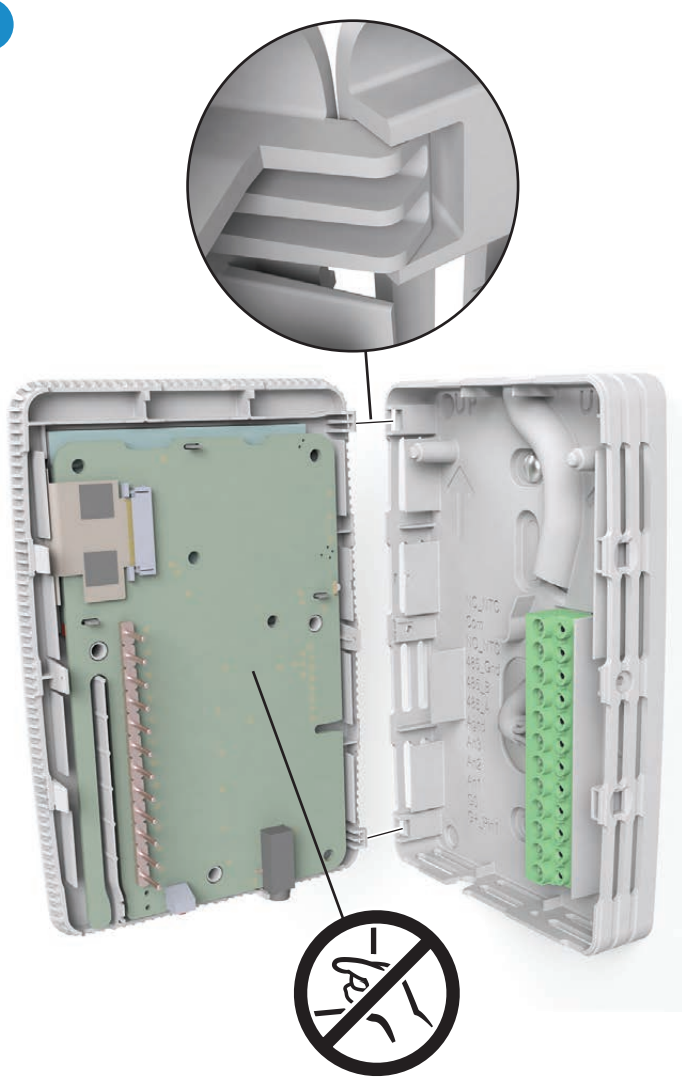

5

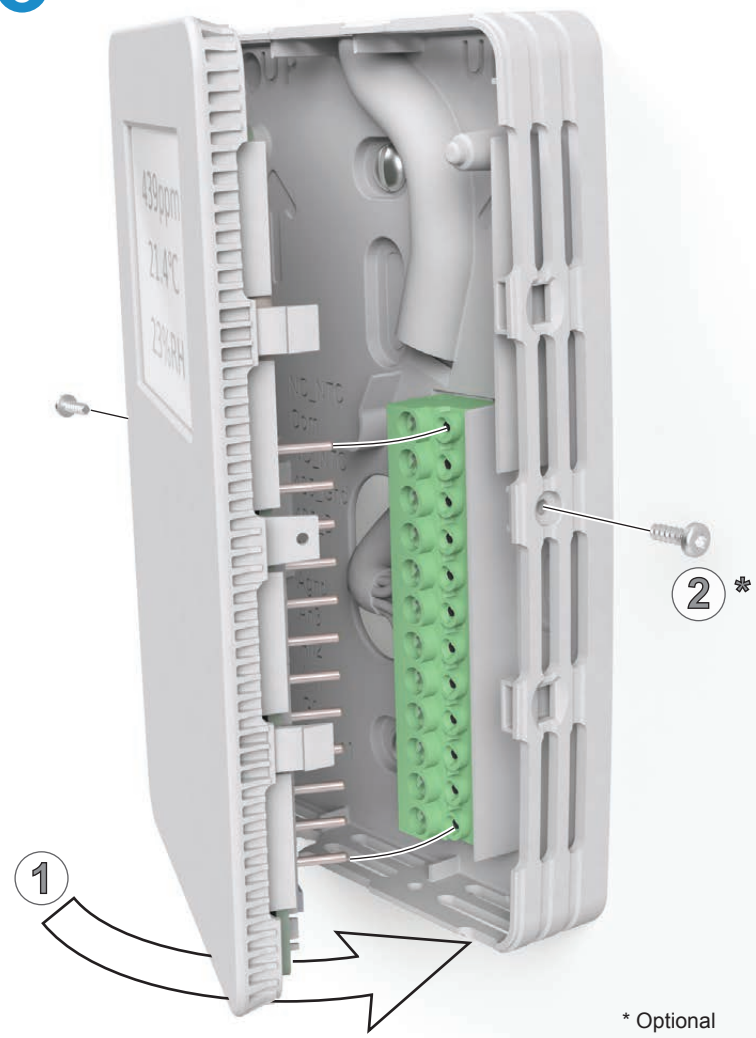

* Optional

6

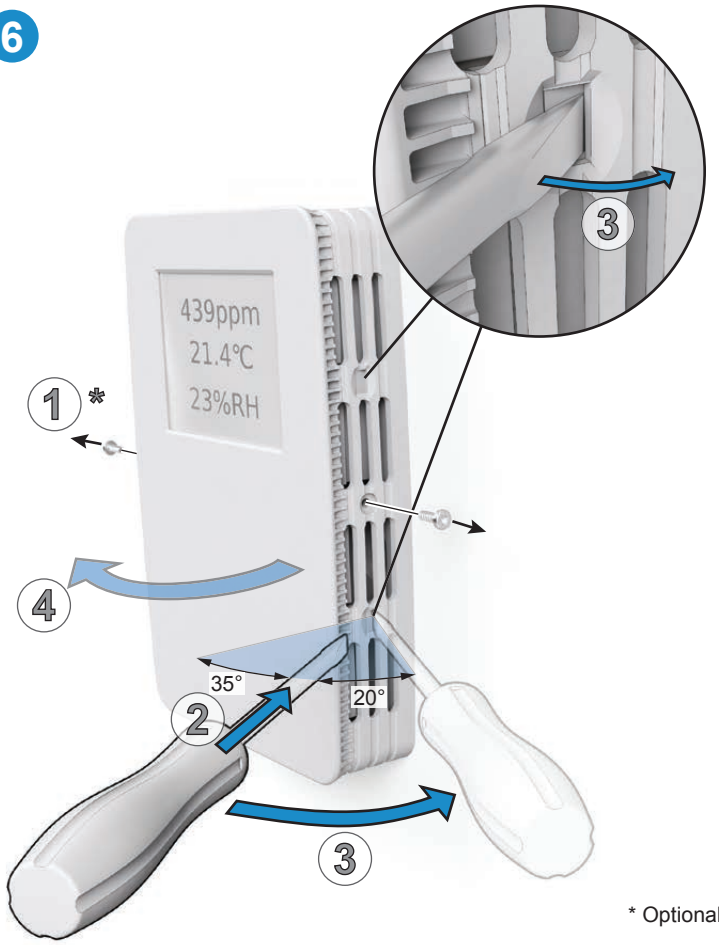

* Optional

SenseAir AB (headquarter)
Stationsgatan 12, Box 96, 820 60 Delsbo, Sweden
Phone: +46-(0)653 – 71 77 70
www.senseair.com